



Hard Drive Seagate Extern HDD wechseln

Tutorial shows how you can remove the hard drive from the housing in order to replace it with another.

Written By: Nicola





TOOLS:


- [screwdriver](#) (1)



PARTS:


- [New HDD](#) (1)

Step 1 — open housing

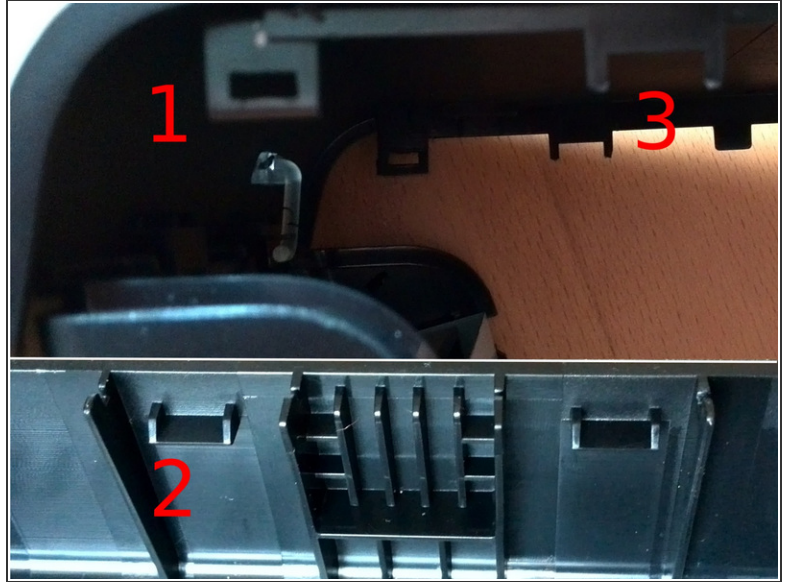




- best at the back open the case at the terminals.
- The lid has tongues (1) of which are plastic verhardt in the base tray (2). By pressing the floor pan to the outside this can be solved. Top with a flat screwdriver or similar tool.
- The manufacturer shall opening apparently not provided, therefore fading slightly at the entanglement can not be excluded. (3)

Step 2 — Lift out drive carriage

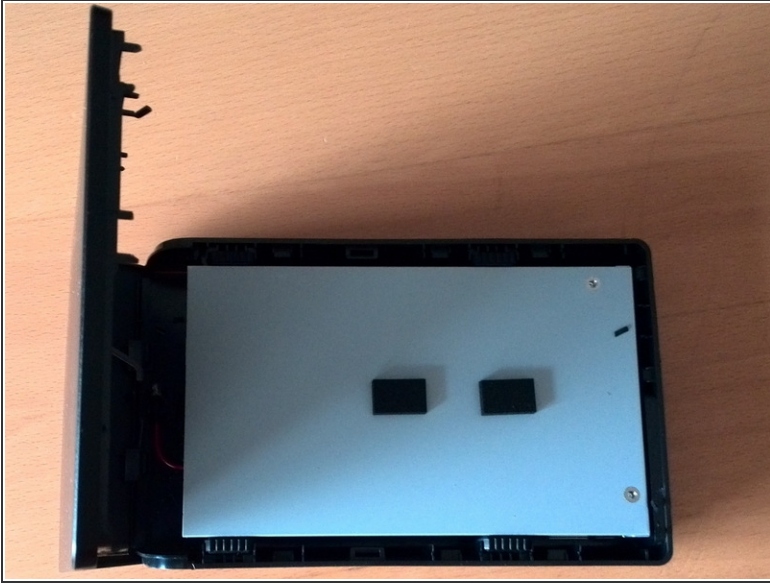

- The Fetplatte can now be lifted out of the plastic case. It is not attached.

Step 3 — take hard drive from the hard drive sled

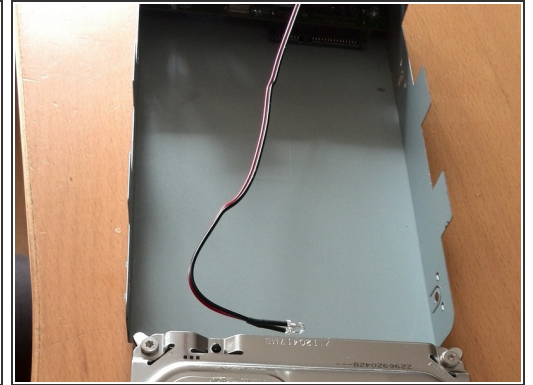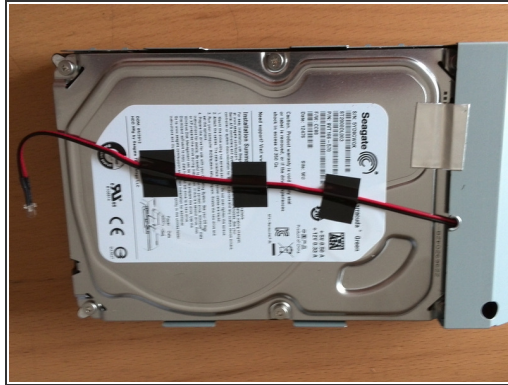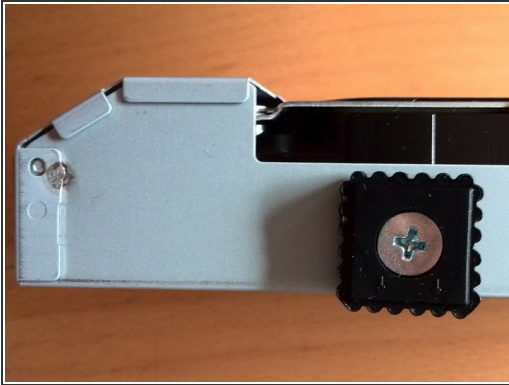

- The lateral bolts.
- Remove at the Fetplatte firmly bonded cable and stickers.
- Then pull out the hard drive with some strength back.

Arbeite die Schritte in umgekehrter Reihenfolge ab, um dein Gerät wieder zusammenzubauen.